


Cineroid


LED *Light*

Manual

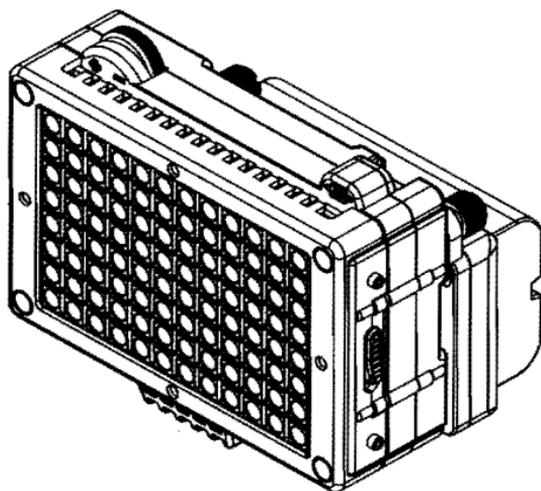


Model : L2C-5K (Daylight)
L2C-3K (Tungsten)
L2C-3K5K (Tungsten + Daylight)


Configuration

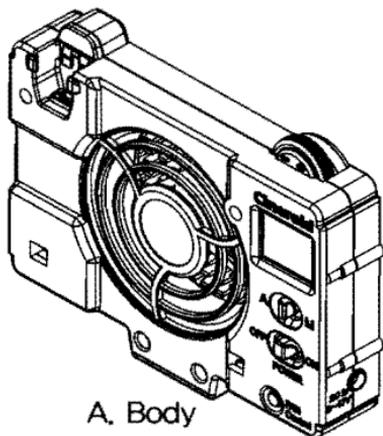


A. Body

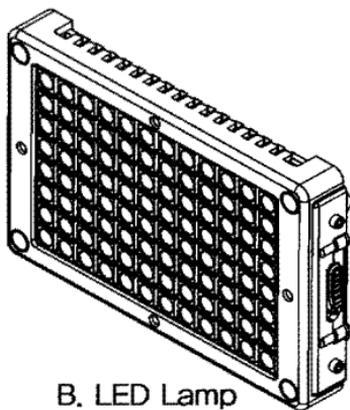


B. LED Lamp

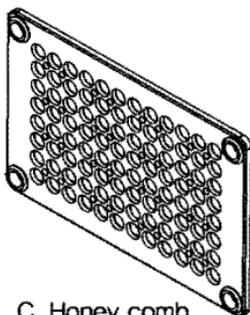


C. Honey comb

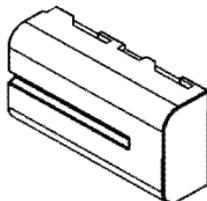

D. Battery

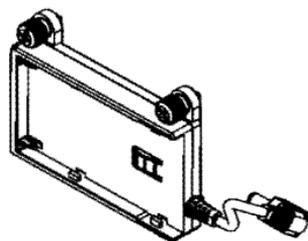

E. Battery mount

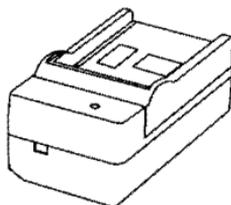



G. Charger






H. Manual

Parts


LED Body

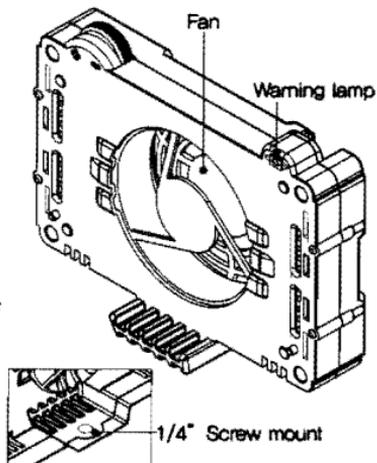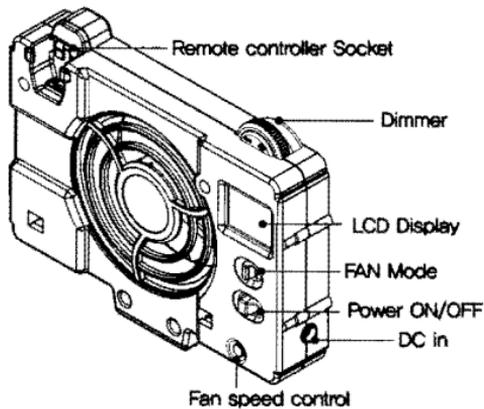


LFD Lamp

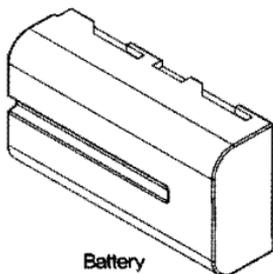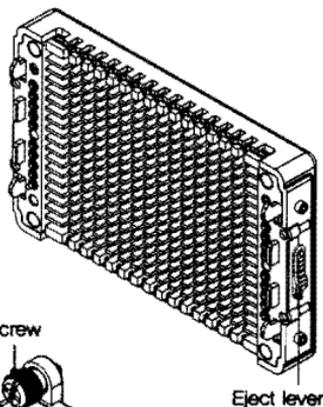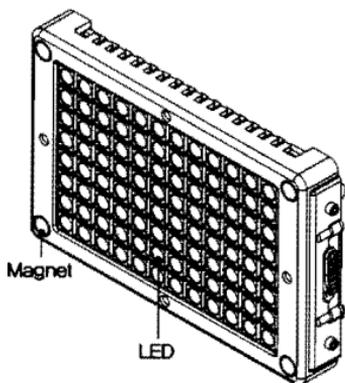

Battery Mount

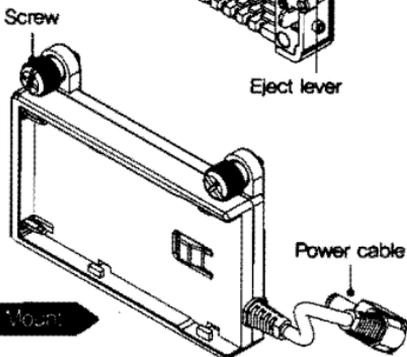


Mounting/Detaching the Lamp

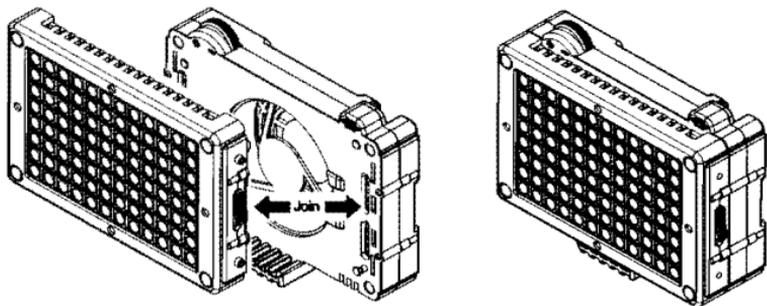


1. The LED lamp is mounted onto the body. Be sure to power off the light before mounting the lamp.
2. The lamp has a top and bottom. Make sure the arrow on the front the lamp is pointing up when mounting. Press the lamp firmly onto the body until you hear a clicking sound and it locks into place.
3. Attempting to mount the lamp incorrectly or in the opposite direction may result in a partially lit lamp or damage to the unit itself.
4. To detach the lamp from the body, simply lower the levers on both sides of the lamp together.
5. If the lamp is not mounted properly, a warning light will appear on the front top right corner of the LED light.

Installing the Battery

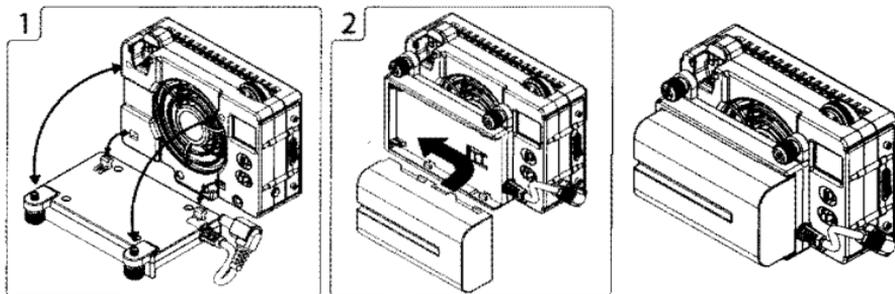


1. Attach the battery mount to the back of the body with the use of the two screws on the mount.
2. Connect the cable on the battery mount to the body.
3. Attach the battery to the battery mount.
4. Be sure to fully charge the battery before installing.
5. The warning light will come on when the battery is running out of power.

Powering On/Off

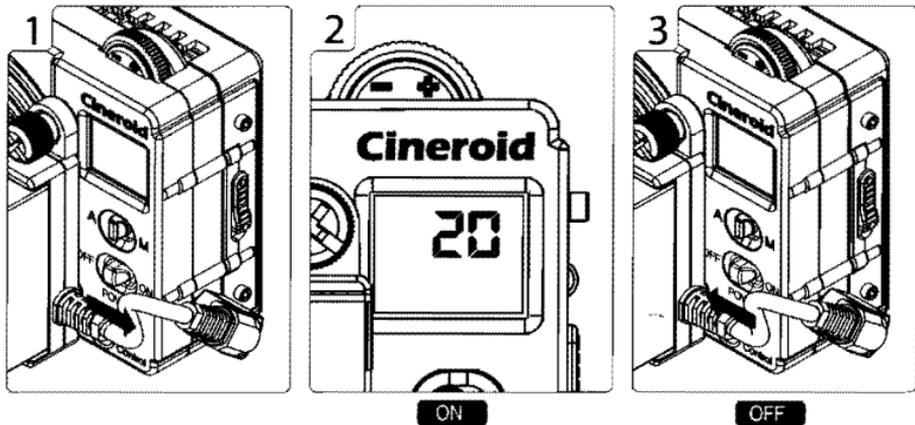


1. Move the power switch to "ON" to turn on the LED light.
2. Check to see if the information on the LCD is displayed properly.
3. Move the power switch to "OFF" to turn off the LED light.

Adjusting Brightness

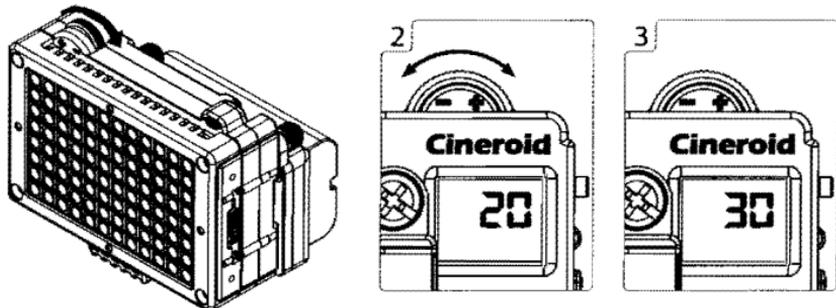


1. Turn the brightness dial side to side to adjust the brightness.
2. The brightness range is from 0~30 and the current level is displayed on the LCD.
3. Turning the dial to the right increases brightness.
4. Turning the dial to the left decreases brightness.
5. Adjusting the brightness to zero DOES NOT power off the LED light.

Adjusting Fan Speed

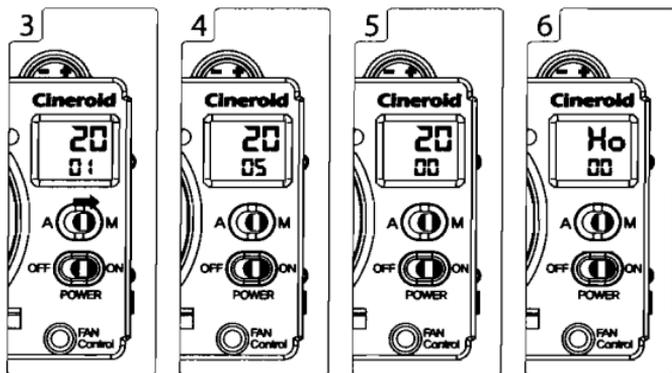


1. The Cineroid LED light has a built-in fan to control the heat level.
2. Adjust the speed of the fan to reduce noise in shooting situations.
3. Turn the fan switch from "A" (Auto) to "M" (Manual) and the current fan speed will be displayed on the LCD.
3. Press the fan control button to adjust the speed of the fan. The speed ranges from 1~5 with 1 being the slowest speed.
4. The fan will not turn on if the speed is set to zero.
5. Setting the fan speed to zero to turn off the fan will result in increasing the heat level of the LED light. This will cause the light to automatically turn fan on. The too high heat level will cause to shut off and a warning "HO" will appear on the LCD display.

Mounting the Grid

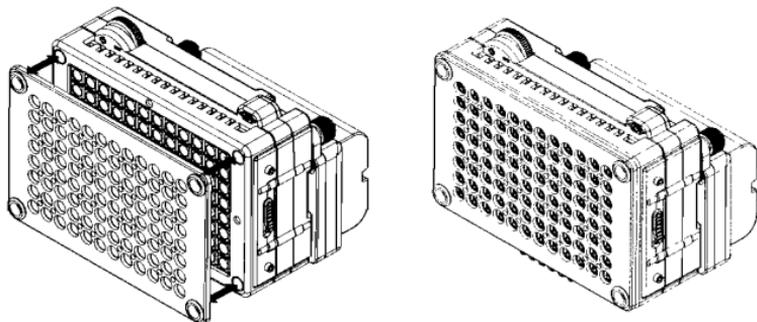

1. Mounting the grid will prevent the light from spreading to the sides.
2. Line up the magnets on the grid to the lamp to mount the grid.


Connecting External Power

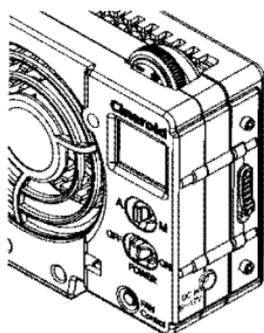

DC in
6~17V

1. In addition to the rechargeable battery, external power sources can also be used to power the light.
2. 12V, 2A power is recommended for external power.
3. Remove the battery mount plug from the body.
4. Insert the power plug from the external power source.

Warning Displays




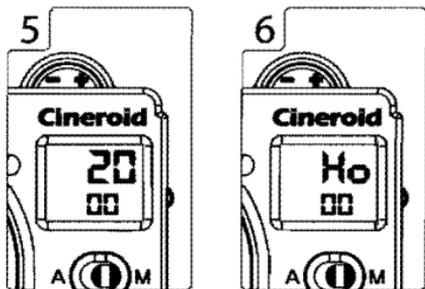


1. The LCD will show a few warning displays.
2. Ho: Internal temperature is too hot.
3. Low battery

○Product Specifications

Light angle	135 degree
Power	DC 6~17V
Weight	189g
Size	75 × 93 × 43(mm)

  ○Optional Products

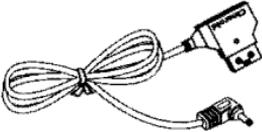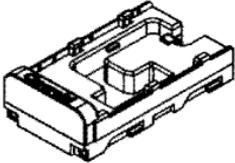Model	Form	Remarks
FCB043		DC plug with D-tap for PA01
FCB044		DC plug only for PA01
PA01		Power Adapter
HG-1		Hand Grip